23” 584.2mm

17” 431.8mm

azuni®

# C126L
## NANTES

### UNDERMOUNT INSTALLATION INSTRUCTION

**1.** Cut out countertop using this template.

**2.** Determine placement of clip brackets as indicated by template. Pre-drill holes according to method desired based on countertop material.

**3.** Apply a bead of silicone evenly along edge on underside of countertop or sink.

**4.** Position and align sink over opening. Press sink onto silicone seal.

**5.** After re-checking alignment, tighten clip brackets.

**6.** Remove excess of silicone.

**7.** It is recommended to hold sink in place using other means for at least 24 hours to allow the silicone and adhesive to cure.

**Note:** THIS TEMPLATE IS ONLY A GUIDE. ACTUAL SINK SHOULD BE PRESENT TO ENSURE PERFECT CUT OUT.

**Hint:** After silicone cures, wipe inside edge with dentured alcohol. This smooth out any rough areas.

@azuniproducts
Customer Service
1-888-493-2931

CONÇU AU CANADA • DESIGNED IN CANADA •

### UNDERMOUNT

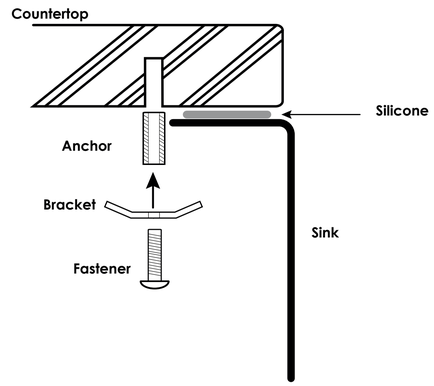


DXF file and installation instructions available to download in our website **www.azuni.ca** with each sink model.

**Note:** DXF file is a CAD file that needs special software to access and read, mostly used by countertop and kitchen companies.

**SCALE 1:1**
**FORMAT SIZE: A1**