31¼" 793.75mm

30" 762mm

azuni®

C234L
LAVAL

UNDERMOUNT OR TOPMOUNT INSTALLATION INSTRUTION

1. Cut out countertop using this template.
2. Determine placement of clip brackets as indicated by template. Pre-drill holes according to method desired based on countertop material.
3. Apply a bead of silicone evenly along edge on underside of countertop or sink.
4. Position and align sink over opening. Press sink onto silicone seal.
5. After re-checking alignment, tighten clip brackets.
6. Remove excess of silicone.
7. It is recommended to hold sink in place using other means for at least 24 hours to allow the silicone and adhesive to cure.


Note: THIS TEMPLATE IS ONLY A GUIDE. ACTUAL SINK SHOULD BE PRESENT TO ENSURE PERFECT CUT OUT.

Hint: After silicone cures, wipe inside edge with dentured alcohol. This smooth out any rough areas.


@azuniproducts
Customer Service
1-888-493-2931

CONÇU AU CANADA · DESIGNED IN CANADA

TOPMOUNT

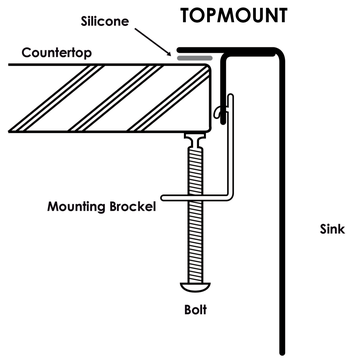

UNDERMOUNT

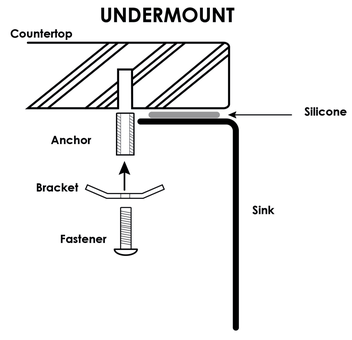

TOPMOUNT INSTALLATION →

UNDERMOUNT INSTALLATION →

17" 431.80mm

18¼"" 463.55mm

DXF file and installation instructions available to download in our website www.azuni.ca with each sink model.

Note: DXF file is a CAD file that needs special software to access and read, mostly used by countertop and kitchen companies.

SCALE 1:1

FORMAT SIZE: A1