

azuni®


C430L NOIRT

TOPMOUNT INSTALLATION INSTRUCTION

1. Cut out countertop using this template.
2. Insert anchor brackets (Clips) into welded sink brackets with the jaw oriented outboards and extend anchor brackets depending of the countertop thickness.
3. Apply a bead of silicone evenly along edge on topside of countertop or sink.
4. Position and align sink over opening. Press sink onto silicone seal.
5. After re-checking alignment, tighten anchor brackets.
6. Remove excess of silicone.
7. It is recommended to hold sink in place using placing extra weight on sink for at least 24 hours to allow the silicone and adhesive to cure.

Note: THIS TEMPLATE IS ONLY A GUIDE. ACTUAL SINK SHOULD BE PRESENT TO ENSURE PERFECT CUT OUT.

Hint: After silicone cures, wipe inside edge with dentured alcohol. This smooth out any rough areas.

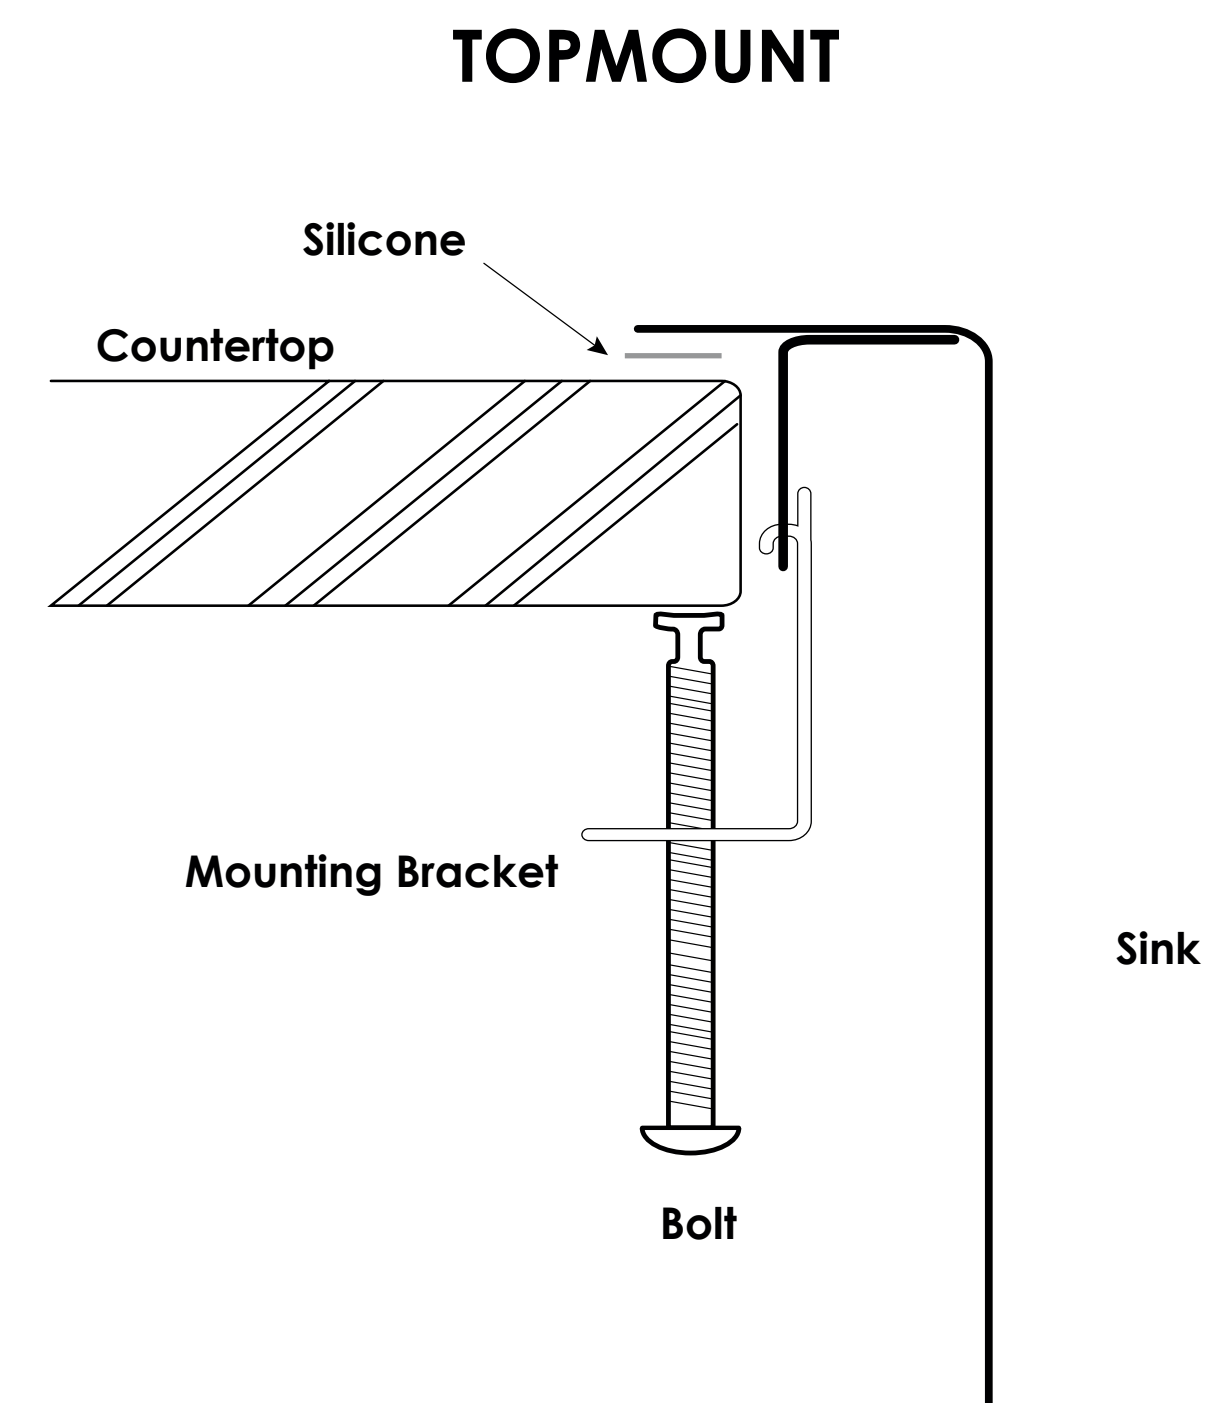

19 1/2"
496mm






 @azuniproducs
 Customer Service
 1-888-493-2931



DXF file and installation instructions available to download in our website
www.azuni.ca with each sink model.

Note: DXF file is a CAD file that needs special software to access and read, mostly used by countertop and kitchen companies.

SCALE 1:1
 FORMAT SIZE: A1