




UNDERMOUNT
Negative Over hang
Recommended 1/8 to 1/4 of an inch

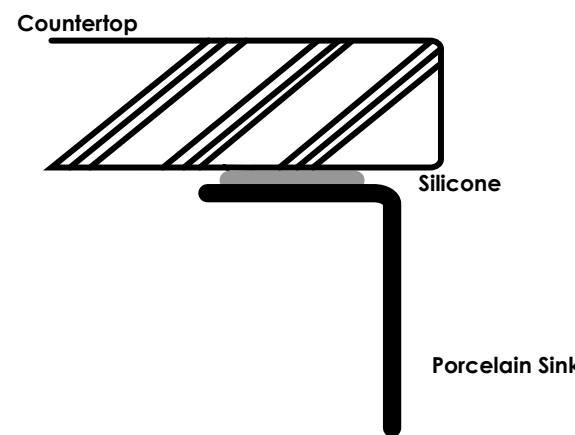

For bathroom undermount porcelain sinks which are molded parts, the over hang installation is the most popular and recommended style, it provides the nicest look from almost every angle. The over hang distance should be 1/8 to 1/4 of an inch, depending of the countertop used.

DXF file and installation instructions available to download in our website
www.stylishkb.com with each sink model.

Note: DXF file is a CAD file that needs special software to access and read, mostly used by countertop and kitchen companies.

P-205

SLEEK

UNDERMOUNT INSTALLATION INSTRUCTION

1. Cut out countertop using this template.
2. Trace the outline of the template and cut countertop according to templated outline using appropriate cutting tools. Template is for guide only.
3. Clamp the sink and hold in place while adhesive cures. There are different methods, we suggest using a couple of pieces of wood with a threaded rod.
4. Clean sink flange and underside of cut-out area of countertop, making sure that the area is smooth and free of debris.
5. Apply continuous bead of silicone caulk evenly on top of sink flange.
6. Remove excess of silicone.
7. It is recommended to hold porcelain sink in place using other means for at least 24 hours to allow the silicone and adhesive to cure.

! Note: THIS TEMPLATE IS ONLY A GUIDE. ACTUAL PORCELAIN SINK SHOULD BE PRESENT TO ENSURE PERFECT CUT OUT.

Hint: After silicone cures, wipe inside edge with dentured alcohol. This smooths out any rough areas.



@stylish.international.inc
Customer Service
1-855-789-5352

 **SCAN QR CODE TO GET
INSTALLATION INSTRUCTIONS**

SCALE 1:1
FORMAT SIZE: A1