


17 1/2" 445mm



TOPMOUNT

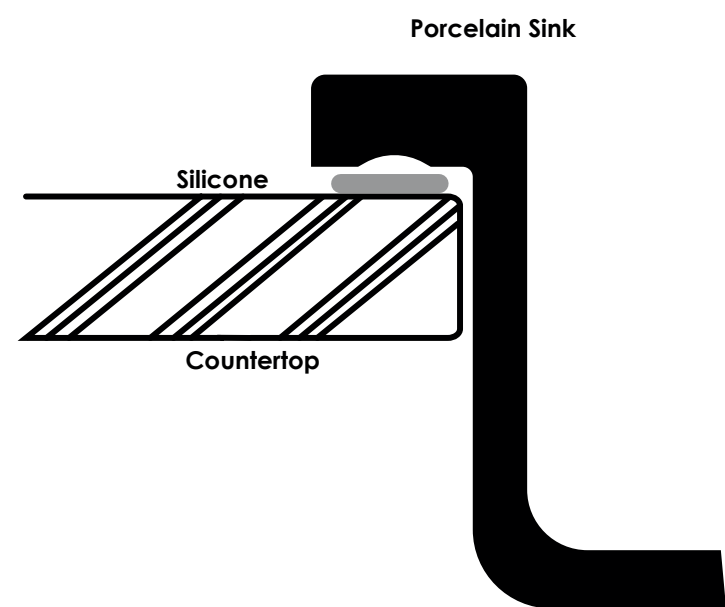

DXF file and installation instructions available to download in our website www.stylishkb.com with each sink model.

Note: DXF file is a CAD file that needs special software to access and read, mostly used by countertop and kitchen companies.

P-210H
CLASSY

TOPMOUNT INSTALLATION INSTRUCTION

1. Cut out countertop using this template.
2. Trace the outline of the template and cut countertop according to templated outline using appropriate cutting tools. Template is for guide only.
3. Clean sink flange and underside of cut-out area of countertop, making sure that the area is smooth and free of debris.
4. Apply continuous bead of silicone caulk evenly on top of sink flange.
5. Drop-in on countertop opening.
6. Push down on sink and ensure is stable and not rocking on countertop
7. Remove excess of silicone.
8. It is recommended to hold porcelain sink in place using other means for at least 24 hours to allow the silicone and adhesive to cure.

⚠ Note: THIS TEMPLATE IS ONLY A GUIDE. ACTUAL PORCELAIN SINK SHOULD BE PRESENT TO ENSURE PERFECT CUT OUT.

⚠ Hint: After silicone cures, wipe inside edge with dentured alcohol. This smooth out any rough areas.



@stylish.international.inc
Customer Service
1-855-789-5352



SCAN QR CODE TO GET
INSTALLATION INSTRUCTIONS

14"
356mm

SCALE 1:1
FORMAT SIZE: A1