
12” 304.8mm

16” 406.4mm

Stylish®

UNDERMOUNT

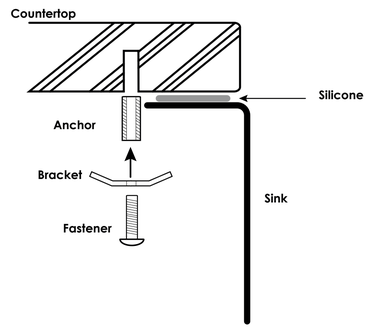

DXF file and installation instructions available to download in our website www.stylishkb.com with each sink model.

Note: DXF file is a CAD file that needs special software to access and read, mostly used by countertop and kitchen companies.

S-310G
IVORY

UNDERMOUNT INSTALLATION INSTRUCTION

1. Cut out countertop using this template.
2. Determine placement of clip brackets as indicated by template. Pre-drill holes according to method desired based on countertop material.
3. Apply a bead of silicone evenly along edge on underside of countertop or sink.
4. Position and align sink over opening. Press sink onto silicone seal.
5. After re-checking alignment, tighten clip brackets.
6. Remove excess of silicone.
7. It is recommended to hold sink in place using other means for at least 24 hours to allow the silicone and adhesive to cure.

Note: THIS TEMPLATE IS ONLY A GUIDE. ACTUAL SINK SHOULD BE PRESENT TO ENSURE PERFECT CUT OUT.

Hint: After silicone cures, wipe inside edge with dentured alcohol. This smooth out any rough areas.

@stylish.international.inc
Customer Service
1-855-789-5352

CONÇU AU CANADA DESIGNED IN CANADA

SCALE 1:1
FORMAT SIZE: A1