


16" 406.4mm



S-618WK VERSA18

UNDERMOUNT

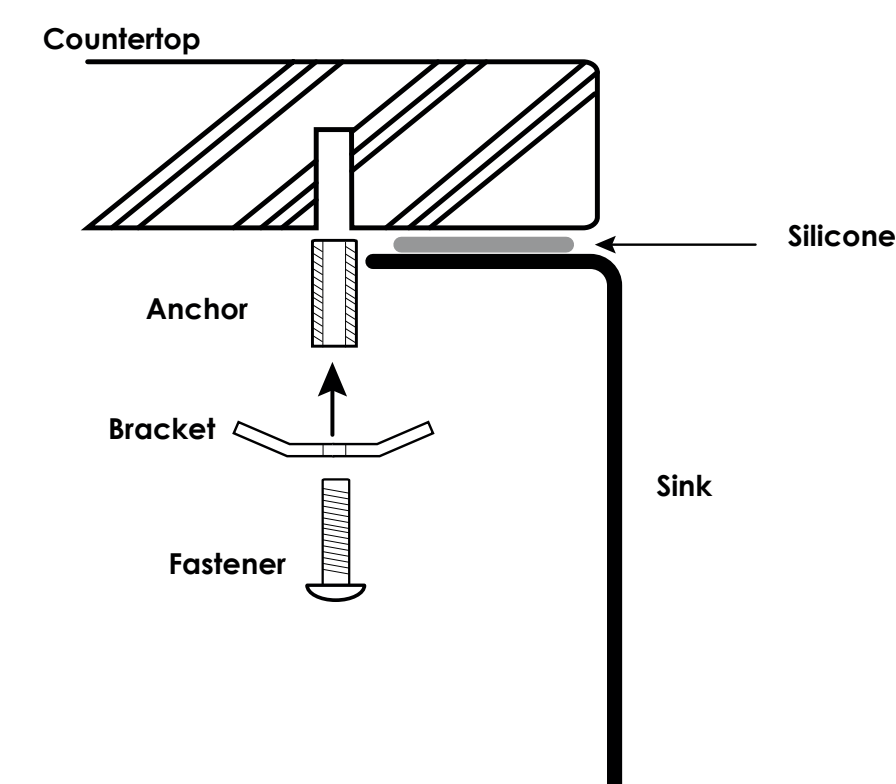

UNDERMOUNT INSTALLATION INSTRUCTION

1. Cut out countertop using this template.
2. Determine placement of clip brackets as indicated by template. Pre-drill holes according to method desired based on countertop material.
3. Apply a bead of silicone evenly along edge on underside of countertop or sink.
4. Position and align sink over opening. Press sink onto silicone seal.
5. After re-checking alignment, tighten clip brackets.
6. Remove excess of silicone.
7. It is recommended to hold sink in place using other means for at least 24 hours to allow the silicone and adhesive to cure.

Note: THIS TEMPLATE IS ONLY A GUIDE. ACTUAL SINK SHOULD BE PRESENT TO ENSURE PERFECT CUT OUT.

Hint: After silicone cures, wipe inside edge with denatured alcohol. This smooths out any rough areas.

DXF file and installation instructions
available to download in our website
www.stylishkb.com with each sink model.

Note: DXF file is a CAD file that needs
special software to access and DXF file is a CAD file that
needs special software to access and



@stylish.international.inc
Customer Service
1-855-789-5352



17"
431.8mm

SCALE 1:1
FORMAT SIZE: A1