



S-822
ASPEN

TOPMOUNT

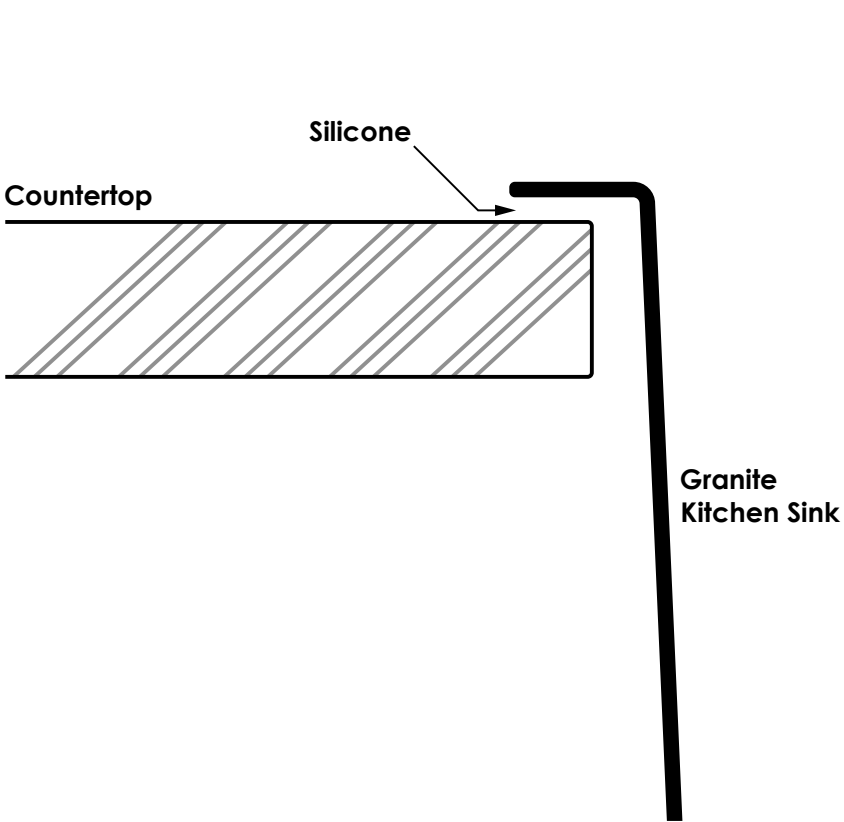

UNDERMOUNT

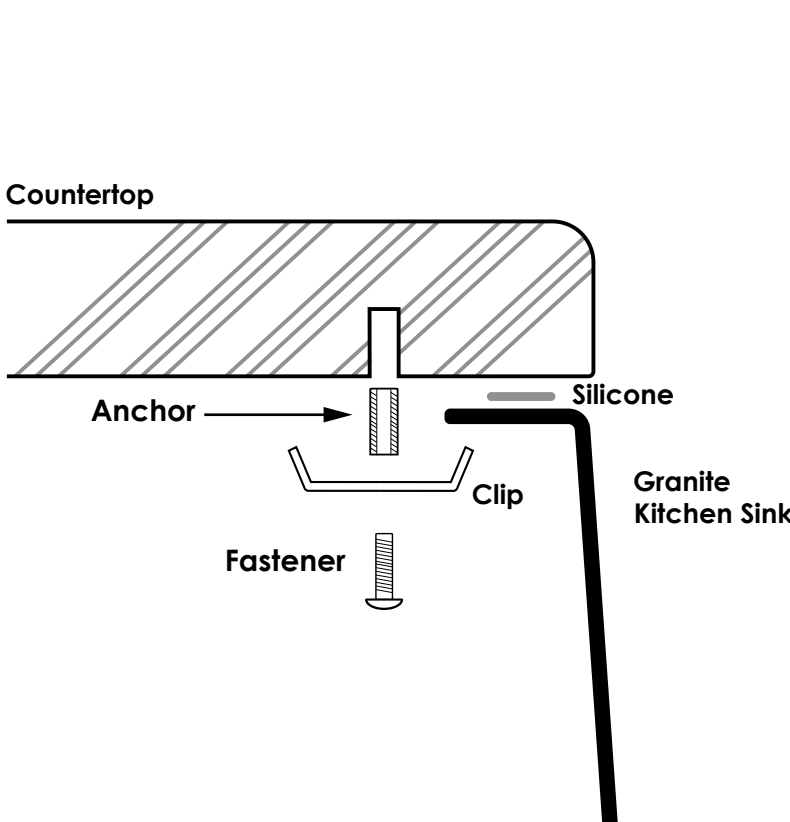

TOPMOUNT OR UNDERMOUNT INSTALLATION INSTRUCTION

1. Cut out countertop using this template.
2. Drill holes on the underside of the countertop, approximately 1/2" from edge of the sink to be installed. Holes should be evenly spaced approximately 6" to 8" apart starting from every corner as shown below.
3. Insert anchors under the countertop on the drilled holes, so they are ready to fasten the sink flange. Anchors should be inserted with a hammer until flush.
4. Apply a bead of silicone evenly along edge on underside of countertop or sink.
5. Position and align sink over opening. Press sink onto silicone seal.
6. After re-checking alignment, tighten clip brackets.
7. Remove excess of silicone.
8. It is recommended to hold sink in place using other means for at least 24 hours to allow the silicone and adhesive to cure.

Note: THIS TEMPLATE IS ONLY A GUIDE. ACTUAL SINK SHOULD BE PRESENT TO ENSURE PERFECT CUT OUT.

Hint: After silicone cures, wipe inside edge with dentured alcohol. This smooth out any rough areas.

DXF file and installation instructions available to be downloaded in our website at
www.stylishkb.com

@stylish.international.inc
Customer Service
1-855-789-5352



395mm 420mm