



**25"** 635mm

**S-827**  
**NORQUAY**

**TOPMOUNT**

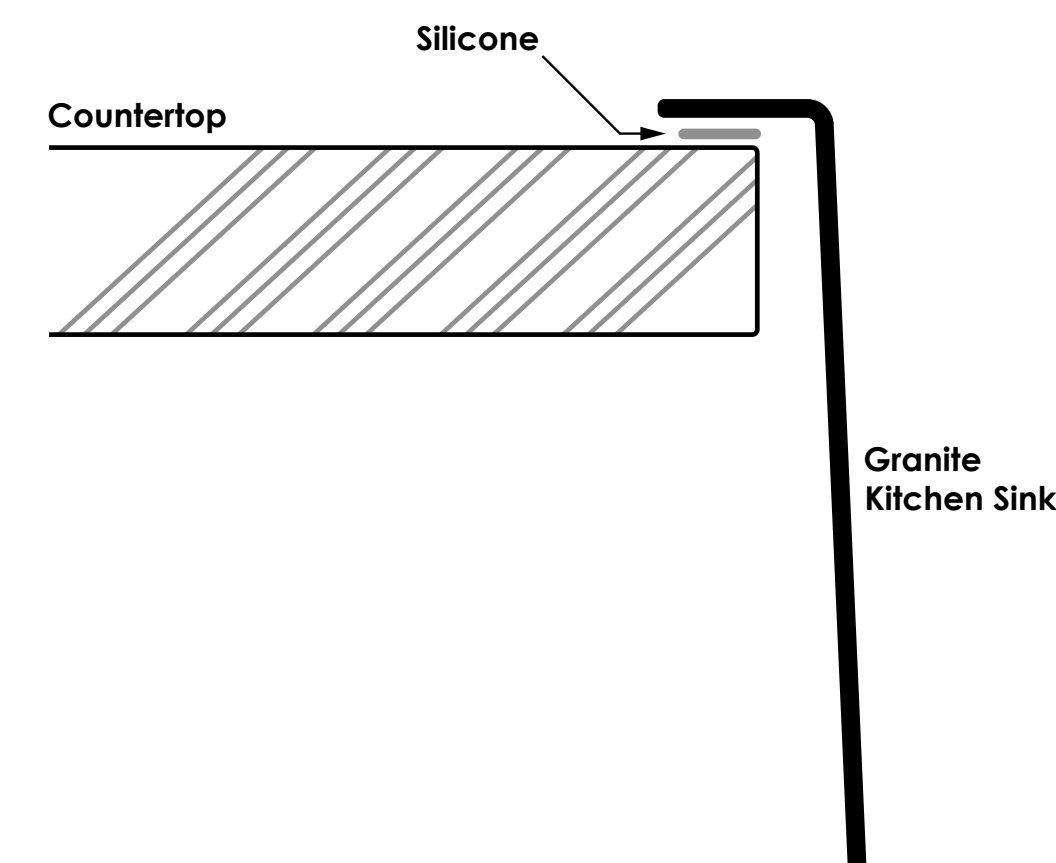

**UNDERMOUNT**

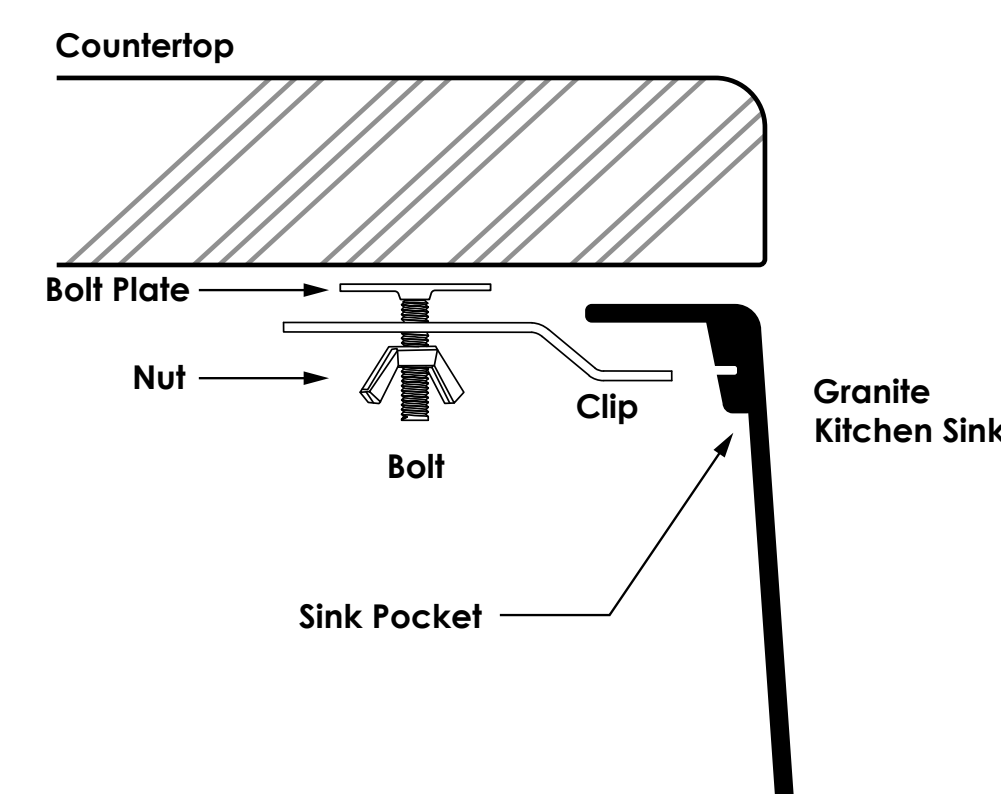

- Note:** THIS TEMPLATE IS ONLY A GUIDE. ACTUAL SINK SHOULD BE PRESENT TO ENSURE PERFECT CUT OUT.

**Hint:** After silicone cures, wipe inside edge with dentured alcohol. This smooths out any rough areas.




  
 @stylish.international.inc  
 Customer Service  
 1-855-789-5352



**16"**  
406.4mm

**17 3/8"**  
441mm